



INSTALLING THE X-TINGUISH® X-TREME BRACKET R 1.0.1

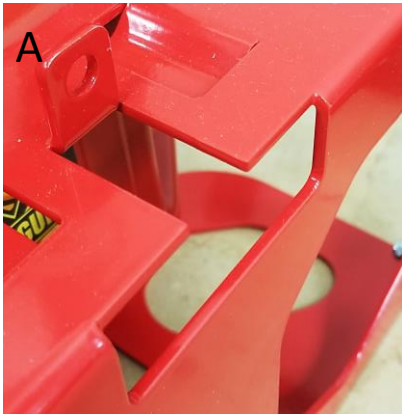


A. Find the opening at the top rear of the unit



B. Insert the bracket lock through the opening into the channel.

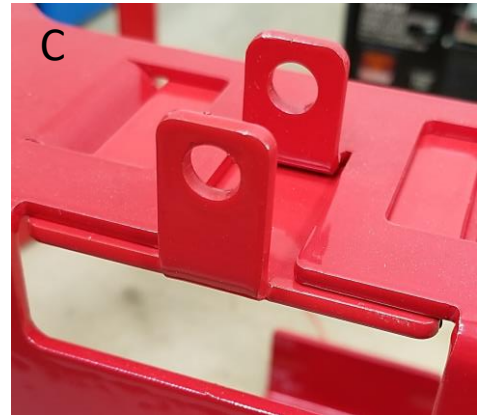

C. The bracket lock should look exactly as shown above.

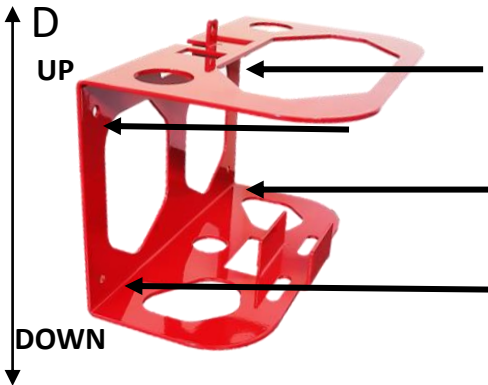


D. MOUNT BRACKET IN THE UPRIGHT POSITION, AS SHOWN, WITH YOUR MOUNTING HARDWARE.



E. INSERT THE X-TINGUISH® X-TREME INTO THE BRACKET WITH THE HANDLE FACING UP (AS SHOWN).


NOTE: ONCE THE BRACKET IS AFFIXED TO THE MOUNTING SURFACE, YOU WILL NOT BE ABLE TO REMOVE THE LOCK PLATE.

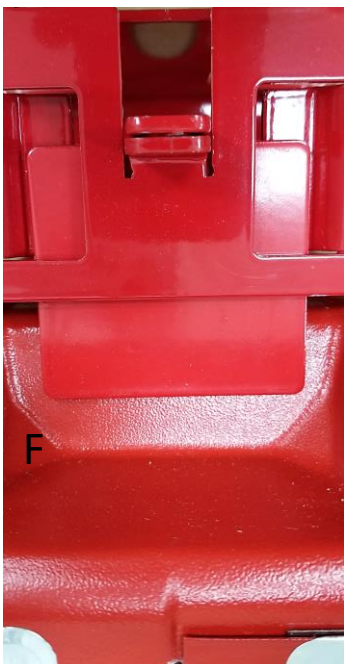

F. PUSH THE BRACKET LOCK TIGHT AGAINST THE BRACKET AS SHOWN LEFT, SO THE LOCK PLATE SLIDES OVER THE X-TINGUISH® X-TREME.

G. **OPTIONAL**
INSERT THE PROVIDED ZIP TIE AND SECURE X-TINGUISH® X-TREME. THIS TYPE OF INSTALLATION WILL SECURE THE UNIT INSIDE THE BRACKET.

YOU MUST BE ABLE TO CUT THE ZIP TIE IN ORDER TO REMOVE THE X-TINGUISH® X-TREME FROM THE BRACKET.

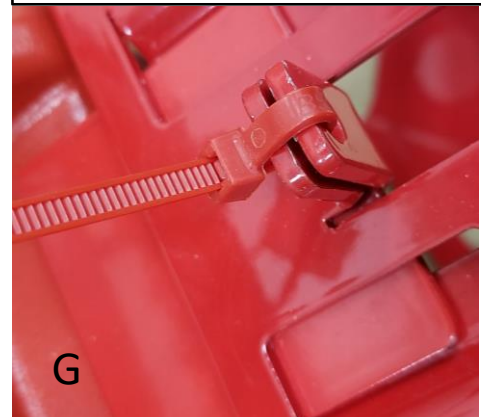

USE THIS INSTALLATION IF THE UNIT WILL BE UNDER CONSTANT VIBRATION, LIKE A BOAT OR MOUNTED ON MACHINERY.